



Important: Do not remove grout guard until the installation is complete.
Do not leave unit in direct sunlight for long periods of time.




Correct plumbing for single unit with ball valve

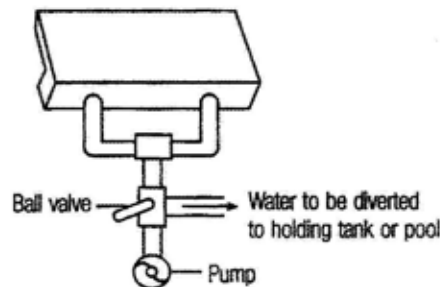

Bottom feed unit may be used when space is limited.

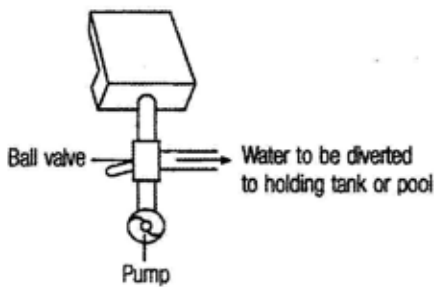

Correct plumbing for multiple units with ball valve. (It is best to valve each unit)

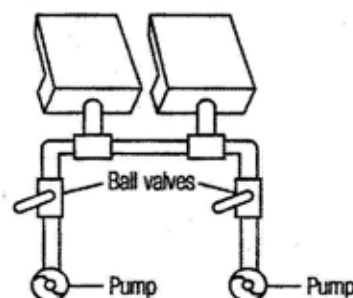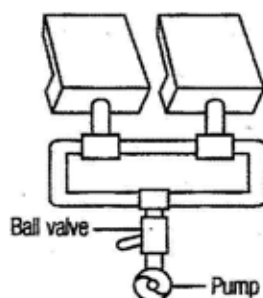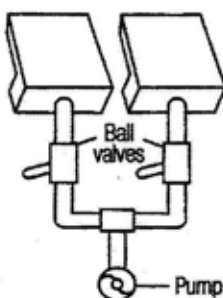

When brick or mortar is fully dry and level you can use adhesive to bond waterfall unit to wall construction or bull nosing.

Allow 10mm expansion gap either end of unit

Fully flush out line before connecting pipe to rear of waterfall unit.

PROBLEM	CAUSE	SOLUTION
The flow is not smooth - or - There is a gap in the flow	There may be debris in the opening	Use a thin object to remove debris by sliding the object gently along the opening

Rain Effect can be installed in all sizes of our range including fibre optic. When installing a rain unit, do not exceed 20 litres per minute per 300mm of waterfall length.

Fibre Optic waterfall units come in sizes from 300mm to 2400mm length of waterfall opening. The fibre optic light engines come in 8 colours with a 100 watt halogen globe and remote control unit.

IMPORTANT

DO NOT LEAVE UNIT IN DIRECT SUNLIGHT FOR LONG PERIODS OF TIME.
DO NOT INSTALL WATERFALL UNIT ON UNEVEN OR UNLEVEL SURFACE.
IF INSTALLED INCORRECTLY THIS MAY CAUSE DISTORTION OR DAMAGE THE WATERFALL UNIT.



Rainbow Pool Products

PO Box 2388, Mansfield Qld 4122

Telephone STD 61-7-3849 5385

Facsimile STD 61-7-3849 5384

Email: info@rainbowpoolproducts.com.au

Web: www.rainbowpoolproducts.com.au