



UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: TOLERANCES: LINEAR: ANGULAR:		FINISH: Machined/Finished		DEBUR AND BREAK SHARP EDGES		DO NOT SCALE DRAWING		REVISION	
						© Rainware Pty Ltd 2012			
	NAME	SIGNATURE	DATE			TITLE: S/S Rainware Rose			
DRAWN	Stevan Balfour								
CHK'D									
APPV'D									
MFG	Rainware Pty Ltd								
Q.A.				MATERIAL: 316 Stainless Steel		DWG. NO.			A4
				WEIGHT:		SCALE:1:1		SHEET 1 OF 1	

Rainware Shower Rose Installation Instructions

1. Clean ½" BSP Male thread of all dirt & old thread tape, flush pipe work, reapply new thread tape about 6-10 turns.
2. Screw on shower rose base(with o'ring) until tight, carefully not to damage the flow regulator disc inside. Apply o'ring lubricant to o'ring if required.
3. Test for leaks.
4. Slide on Stainless Steel Rose onto base, position and tighten grub screw with Allen key provided.

Note:

Some instantaneous hot water heaters will not work with flow rates below 9 litres per minute. Check with the manufacturer of the hot water system prior to installation.

Performance:

The Shower rose will operate at the designed flow rate as shown on the WELS Label within the minimum pressure of 150 KPA to Maximum pressure range 500 KPA.



Thank you for purchasing a Rainware Product.



Rainbow Pool Products

PO Box 2388, Mansfield Qld 4122

Telephone STD 61-7-3849 5385

Facsimile STD 61-7-3849 5384

Email: info@rainbowpoolproducts.com.au

Web: www.rainbowpoolproducts.com.au